
SB-244-MTLU

SB-244-U7155U

SB-244-U5125U

**Industrial Fanless BOX PC w/ Intel® Core Ultra
Meteor Lake U Series Processor**

User Manual

Version 1.0

Revision History

Version	Release Time	Description
1.0	2026, 05	Initial release

Contents	i
Preface.....	iii
Copyright Notice	iii
Declaration of Conformity	iii
CE	iii
FCC Class A.....	iii
RoHS	iv
SVHC / REACH	iv
Important Safety Instructions	v
Warning	vi
Replacing Lithium Battery	vi
Technical Support	vi
Warranty	vii
Chapter 1 - Introduction.....	1
1.1. Specifications	2
1.2. Inside the Package	4
Chapter 2 - Getting Started.....	5
2.1. Dimensions.....	6
2.2. External I/O Port & Overview	7
2.2.1. Power ON/OFF Button	8
2.2.2. DP and HDMI Video Ports	8
2.2.3. USB Ports	8
2.2.4. LAN Ports.....	9
2.2.5. DC-IN	9
2.2.6. Pre-cut Hole	9
2.2.7. Audio Connector	9
2.2.8. Serial Port	10
2.2.9. 3G/4G Antenna reserved hole	11
2.2.10. SIM slot.....	11
2.3. Internal Overview	12
2.3.1. Mini-PCle slot (MINI_PCIE1)	13
2.3.2. 8 bit GPIO Pin header (JGPIO1).....	13
2.3.3. 8 bit GPIO voltage switch jumper.....	14
2.3.4. AT/ATX jumper	14
2.3.5. Clear CMOS jumper.....	14
2.3.6. Series ports (COM5_6) pin header	15
Chapter 3 - Installation and Maintenance.....	17
3.1. Installation	18
3.1.1. Bottom Cover / Top Cover Installation and Removal	18
3.2.1. Key Parts Installation and Removal	19
3.3.1. 2.5" drive bay Installation and Removal.....	20
3.3.2. Nano SIM card Installation and Removal.....	20

Chapter 4 - BIOS21

- 4.1. Main24
- 4.2. Advanced25
 - 4.2.1. Turbo Mode setting26
 - 4.2.2. COM mode setting27
 - 4.2.3. RAID mode Settings28
 - 4.2.4. Auto TURN-ON (AT/ATX).....29
 - 4.2.5. Set USB port is powered during sleep or off.....30
- 4.3. Security31
 - 4.3.1. Secure Boot32
- 4.4. Boot35
- 4.5. Save & Exit36

Copyright Notice

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve the reliability, design and function. It does not represent a commitment on the part of the manufacturer.

Under no circumstances will the manufacturer be liable for any direct, indirect, special, incidental, or consequential damages arising from the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Declaration of Conformity

CE

The CE symbol on the computer indicates that it is in compliance with the directives of the European Union (EU). A Certificate of Compliance is available by contacting Technical Support.

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from ARBOR. Please contact your local supplier for ordering information.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC Class A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RoHS

ARBOR Technology Corp. certifies that all components in its products are in compliance and conform to the European Union's Restriction of Use of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive 2002/95/EC.

The above mentioned directive was published on 2/13/2003. The main purpose of the directive is to prohibit the use of lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE) in electrical and electronic products. Member states of the EU are to enforce by 7/1/2006.

ARBOR Technology Corp. hereby states that the listed products do not contain unintentional additions of lead, mercury, hex chrome, PBB or PBDB that exceed a maximum concentration value of 0.1% by weight or for cadmium exceed 0.01% by weight, per homogenous material. Homogenous material is defined as a substance or mixture of substances with uniform composition (such as solders, resins, plating, etc.). Lead-free solder is used for all terminations (Sn(96-96.5%), Ag(3.0-3.5%) and Cu(0.5%)).

SVHC / REACH

To minimize the environmental impact and take more responsibility to the earth we live, Arbor hereby confirms all products comply with the restriction of SVHC (Substances of Very High Concern) in (EC) 1907/2006 (REACH –Registration, Evaluation, Authorization, and Restriction of Chemicals) regulated by the European Union.

All substances listed in SVHC < 0.1 % by weight (1000 ppm)

Important Safety Instructions

Read these safety instructions carefully

1. Read all cautions and warnings on the equipment.
2. Place this equipment on a reliable surface when installing. Dropping it or letting it fall may cause damage
3. Make sure the correct voltage is connected to the equipment.
4. For pluggable equipment, the socket outlet should be near the equipment and should be easily accessible.
5. Keep this equipment away from humidity.
6. The openings on the enclosure are for air convection and protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
7. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
8. Never pour any liquid into opening. This may cause fire or electrical shock.
9. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
10. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user manual.
 - e. The equipment has been dropped or damaged.
 - f. The equipment has obvious signs of breakage.
11. Keep this User Manual for later reference.

Warning

The Box PC and its components contain very delicately Integrated Circuits (IC). To protect the Box PC and its components against damage caused by static electricity, you should always follow the precautions below when handling it:

1. Disconnect your Box PC from the power source when you want to work on the inside.
2. Use a grounded wrist strap when handling computer components.
3. Place components on a grounded antistatic pad or on the bag that came with the Box PC, whenever components are separated from the system.

Replacing Lithium Battery

Incorrect replacement of the lithium battery may lead to a risk of explosion.

The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer.

Do not throw lithium batteries into the trash can. It must be disposed of in accordance with local regulations concerning special waste.

Technical Support

If you have any technical difficulties, please consult the user manual first at:

<https://www.arbor-technology.com>

Please do not hesitate to call or e-mail our customer service when you still cannot find out the answer.

<https://www.arbor-technology.com>

E-mail: info@arbor.com.tw

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Vendor will not be liable for any claim made by any other related party.

Vendors disclaim all other warranties, either expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the hardware, the accompanying product's manual(s) and written materials, and any accompanying hardware. This limited warranty gives you specific legal rights.

Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

This page is intentionally left blank.

Chapter 1

Introduction

1.1. Specifications

System	
CPU	Intel® Core Ultra 7/5 Processors (Meteor Lake-U series)
Memory	1 x 262-pin DDR5 SO-DIMM socket, SDRAM support up to 48GB
Chipset	Integrated in CPU
Graphics	Integrated Intel® Graphics
LAN Chipset	1 x Intel® I219-LM GbE PHY (LAN1) 3 x Intel® I210-AT GbE (LAN2/3/4)
Watchdog Timer	1~255 levels reset
TPM	Nuvoton NPCT760AABYX TPM 2.0 chip
Storage	
Device	1 x M.2 M Key 2242 Slot (SATA signal) 1 x M.2 M Key 2280 Slot (PCIe x4 signals, NVMe) 1 x 2.5" SATA3.0 drive bay [Note: Support RAID 0/1 via M.2 2242 & 2.5" drive bay] *CTOS is available
External I/O	
Serial Port	4 x RS-232/422/485(default RS-232) with Auto flow control
USB Port	2 x USB3.2 Gen2 4 x USB2.0
LAN Port	4 x RJ45
Video Port	1 x HDMI 2.1 TDMS (up to 4096 x 2304 @ 60Hz) 1 x DP1.4a (up to 7680 x 4320 @ 60Hz)
Power Button	1 x Power button w/LED
Remote On/Off	1 x SW
Internal I/O	
Expansion Slot	1 x Full-size Mini-PCIe slot (PCIe/USB signal) 1 x M.2 E Key 2230 slot (PCIe/USB signal) 1 x M.2 M Key 2242 slot (SATA signal) 1 x M.2 M Key 2280 slot (PCIe x4 signals, NVMe) 2 x RS-232 by 3-wire pin header (via optional Cable kit) 1 x 8bit Programmable GPIO pin header (via optional Cable kit) 1 x Nano SIM card slot (for Telecom Mini-PCIe module)
Audio	
Type	1 x Audio (Line-out & Mic-in) (Chipset ALC888S)
Mechanical	
Construction	Aluminum alloy
Mounting	Desk-mount, Wall-mount, DIN-Rail(optional) VESA-mount (75x75mm, 100x100mm optional)
Dimension	200 x 140 x 49.2 mm
Weight	1.8kg

Environmental	
Operating Temp.	-20°C ~ 60°C (-4 ~ 140°F), ambient w/ air flow (WT RAM & SSD)
Storage Temp.	-40°C ~ 85°C (-40 ~ 185°F)
Operating Humidity	5% ~ 95% @ 40°C (non-condensing)
Vibration	5 ~ 500Hz, 2Grms operation
Shock	Operation: 10G@11ms Non-operation: 30G@11ms
Qualification	
Certification	CE, FCC
Power System	
Power Input	DC 10~36V (2-pin Phoenix connector)
OS Support	
Operating System	Windows® 10 / Windows® 11 / Linux Ubuntu 24.04

Note: DIN-Rail mount consists of SB-244-MTLU-VESA-MOUNT + SPA BOX PC DIN RAIL KIT.

1.2. Inside the Package

Upon opening the package, carefully inspect the contents. If any of the items is missing or appears damaged, contact your local dealer or distributor. The package should contain the following items:


Item	Description	Q'ty
SB-244-U7155U SB-244-U5125U	Industrial BOX PC	1
Accessory Box	Phoenix connector for 2Pin DC-IN x 1 Phoenix connector for 2Pin Remote SW x 1 Thermal PAD for Memory x 1 Thermal PAD for M.2 2280 x 2 22-pin SATA & Power cable x 1 Screw package x 1	1

Chapter 2


Getting Started

2.1. Dimensions


The following illustration shows the dimensions of the computer, with the measurements in width, depth, and height called out. (Unit: mm)

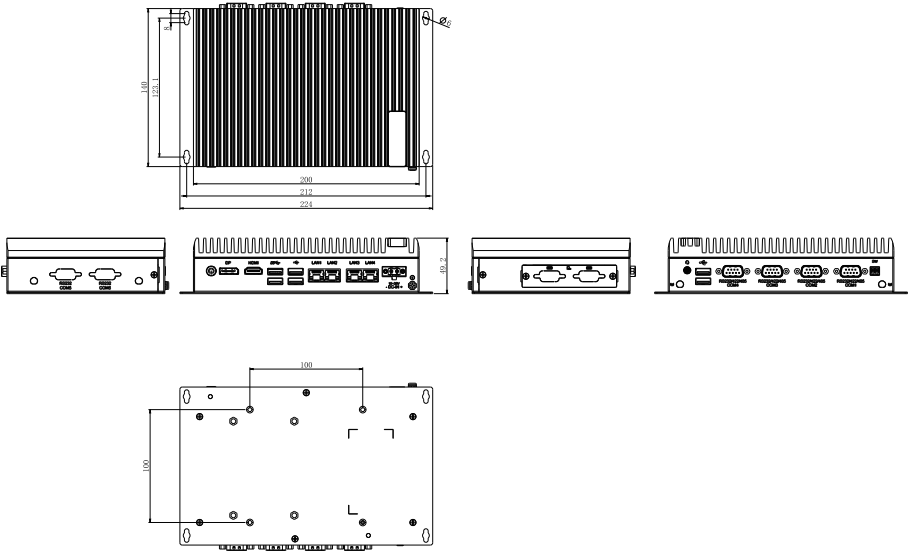


2.2. External I/O Port & Overview

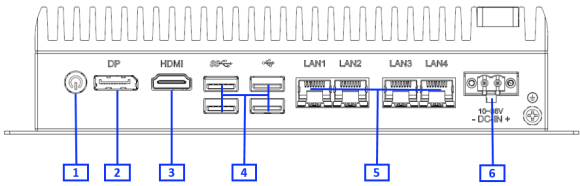


Front I/O Ports

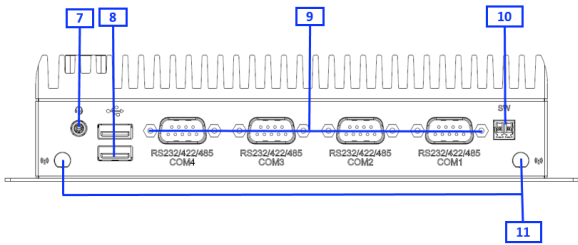

Rear I/O Ports

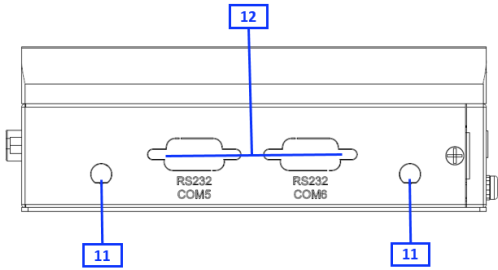

Left I/O Ports

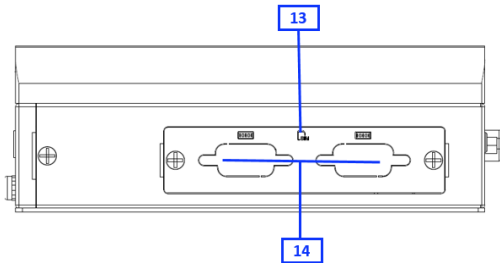

Right I/O Ports

No.	Description	No.	Description
1	Power ON/OFF	2	DP
3	HDMI	4	2 x USB3.2 2 x USB2.0
5	LAN1~4	6	DC-IN
7	Audio	8	2 x USB2.0
9	4 x RS-232/422/485	10	Remote ON/OFF
11	Antenna Hole	12	2 x RS-232 Pre-cut Hole
13	SIM Card Slot	14	2 x DB9 Pre-cut Hole


2.2.1. Power ON/OFF Button



Definition	State
LED indicator	White OFF: Power OFF White ON: Power ON White Flashing: S3 sleep

2.2.2. DP and HDMI Video Ports

Support 4K HD display, and dual displays



Display Port	Maximum resolution
HDMI	4096 x 2304 @60Hz
DP	7680 x 4320 @60Hz

2.2.3. USB Ports


Provide 6 USB ports, 2 x USB3.2, 4 x USB2.0, support Plug-and-play and hot-swappable




USB Version	Theory Bandwidth	Speed	Maximum voltage/ current
USB2.0	480Mbps (60MB/s)	High-Speed	5V/900mA
USB3.2	10Gbps (1024MB/s)	Super-Speed	5V/900mA

2.2.4. LAN Ports

4 x LAN ports, one Intel i219-LM GbE & three Intel i210-AT GbE, support Wake on LAN




2.2.5. DC-IN



Pin	Definition	Pin	Definition
1	GND	2	+10~36V

2.2.6. Pre-cut Hole

Depend on the requirement, could be select to expand to 8 bit GPIO or 2 x COM ports




2.2.7. Audio Connector

Function: For external microphone, headphones or speakers connection

Connector Type: 3.5mm audio port interface


Pin Assignment: Support 4-segment iPhone audio input and output two-in-one connector with the interface aperture of 3.5mm. This interface can be connected to an external microphone, headphones or speakers

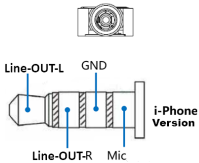

Note: The microphone and GND of the Android version are opposite to those of the iPhone version, and cannot be shared.

2.2.8. Serial Port

6 x COM ports, 4 x DB9 type, support up to 115.2 kbps baud rate.



COM(1~4) RS232/422/485 ports

Pins	RS232 Signal	RS422 Signal	RS485 Signal
1	DCD	Tx-	DATA-
2	RXD	Tx+	DATA+
3	TXD	Rx+	NC
4	DTR	Rx-	NC
5	GND	GND	GND
6	DSR	-	-
7	RTS	-	-
8	CTS	-	-
9	RI	-	-



COM(5~6) RS232 2x3 pin Headers

Pins	RS232 Signal
1	-
2	RXD
3	TXD
4	-
5	GND
6	-

Note:

COM (1-4) support RS232/422/485 auto-flow, mode selection set by BIOS setting.

COM (5-6) only support RS232 mode.

2.2.9. 3G/4G Antenna reserved hole

There are antenna reserved holes on the product to facilitate users to install the antenna of the wireless module.




2.2.10. SIM slot

For users to insert or remove the SIM card.




2.3. Internal Overview

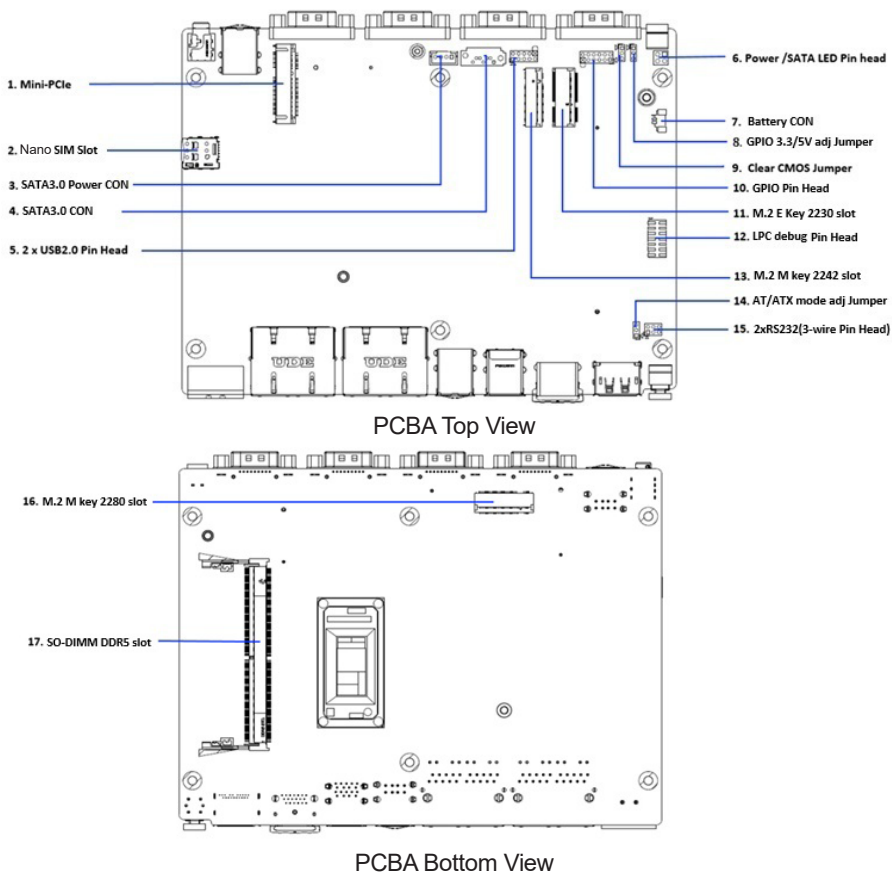

No.	Description	Silkscreen
1	Mini-PCle slot	MINI_PCIE1
2	Nano SIM card slot	JSIM1
3	SATA 3.0 power connector	SATA_PWR1
4	SATA 3.0 connector	SATA1
5	2 x USB 2.0 pin head	JUSB1
6	Power/SATA LED Pin head (1/3 Pin Power LED; 2/4 Pin SATA LED)	JLED1
7	Battery connector	JBAT1
8	GPIO 3.3V/5V adj Jumper	JGPSET1


9	Clear CMOS Jumper	JCMOS1
10	GPIO PIN header	JGPIO1
11	M.2 E Key 2230 slot	M2_WIFI1
12	LPC debug pin header	JDEBUG1
13	M.2 M Key 2242 slot	M2_SATA1
14	AT/ATX mode adj Jumper	JP1
15	2 x RS232 (3-wire Pin Header)	JCOM5_6
16	M.2 M Key 2280 slot	M2_NVME1
17	SO-DIMM DDR5 slot	DIMM1

2.3.1. Mini-PCle slot (MINI_PCIE1)



Mini-PCle slot


2.3.2. 8 bit GPIO Pin header (JGPIO1)



JGPIO1 pin header

Pin	Definition	Pin	Definition
1	VCC_GPIO	2	VCC_GPIO
3	JPIO1	4	JPIO5
5	JPIO2	6	JPIO6
7	JPIO3	8	JPIO7
9	JPIO4	10	JPIO8
11	-	12	GND

2.3.3. 8 bit GPIO voltage switch jumper



JGPSET1 jumper


Silkscreen	Jumper	Voltage
JGPSET1	1-2(default)	3.3V
	2-3	5V

2.3.4. AT/ATX jumper

AT mode: the system starts automatically after power on.

ATX mode, the system starts by Power Button.

AT/ATX mode jumper setting refer to the following table




AT_ATX1 jumper

Silkscreen	Jumper	Function
JP1	1-2(default)	ATX mode (Start by Power Button)
	2-3	AT mode (Start automatically after power on)

2.3.5. Clear CMOS jumper


Clear CMOS jumper setting refer to the following table



CMOS1 jumper

Silkscreen	Jumper	Function
JCOMS1	1-2(default)	Normal
	2-3	Clear CMOS

2.3.6. Series ports (COM5_6) pin header



JCOM5_6 pin header

Pin	Definition	Pin	Definition
1	COM5_SOUT	2	COM6_SOUT
3	COM5_SIN	4	COM6_SIN
5	GND	6	GND

This page is intentionally left blank.

Chapter 3

Installation and Maintenance

3.1. Installation

3.1.1. Bottom Cover / Top Cover Installation and Removal

1. Remove six M3x4 screws from bottom cover, as shown in Figure 3-1-1.

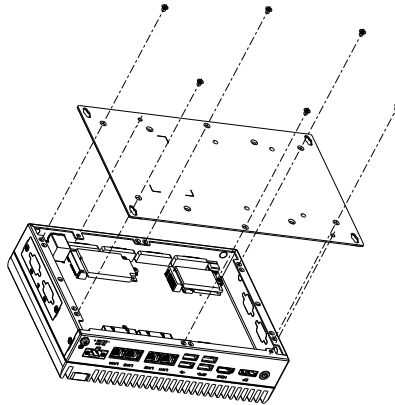


Figure 3-1-1

2. Remove the two M3x6 spring screws in the middle of the motherboard and the four M3x4 screws in the four corners of the chassis, and remove the top cover (aluminum extrusion); as shown in Figure 3-1-2.

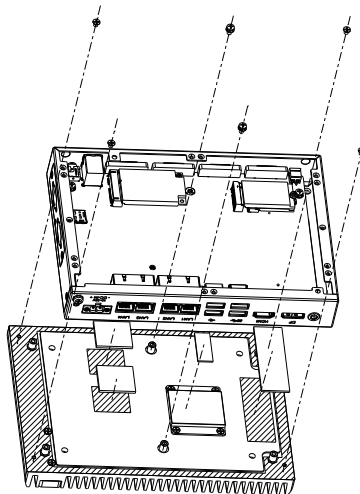


Figure 3-1-2

3.2.1. Key Parts Installation and Removal

1. M.2 2280 module: remove 1 pan-head M3x3 screw, as shown in Figure 3-2-1
SO-DIMM DDR5 memory: Align the edge connector of the SO-DIMM with the alignment key of the memory socket, and insert the SO-DIMM in the socket.

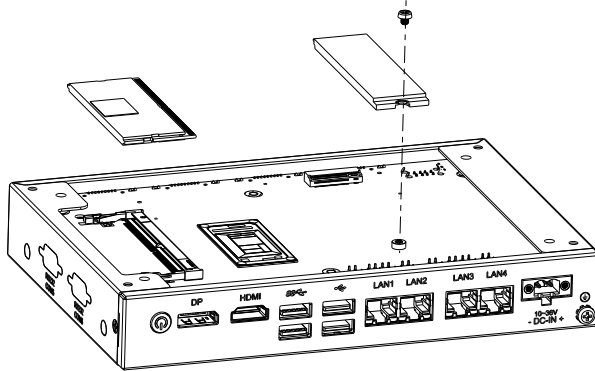


Figure 3-2-1

2. Mini-PCIe: flathead screw (M2x3) to screw hole; M.2-SSD and M.2-WiFi: Secure the M3x4 hex nut to the screw hole, insert the module 2230 into the M.2 2230 slot, and then, after installing the M.2 2242, secure it to the stud with a roundhead M3x6 screw; as shown in Figure 3-2-2.

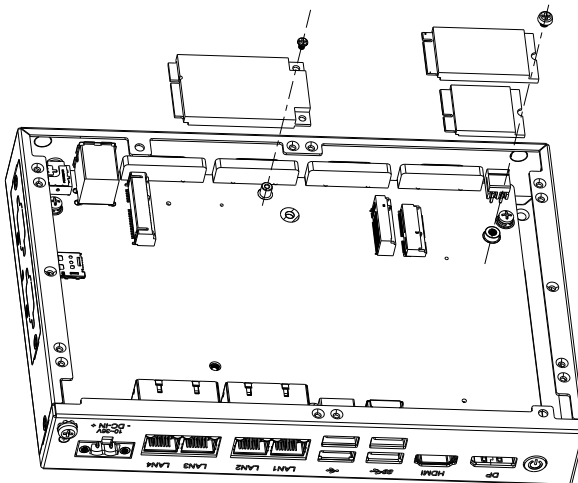


Figure 3-2-2

3.3.1. 2.5" drive bay Installation and Removal

Place the 2.5" drive bay and bracket as shown in the diagram. Secure the 2.5" drive bay side with four M3x4 screws. Insert four rubbers into the bracket grooves and place the module on the bottom cover studs. Secure the module with four screws in sequence to fix it on the bottom cover studs.

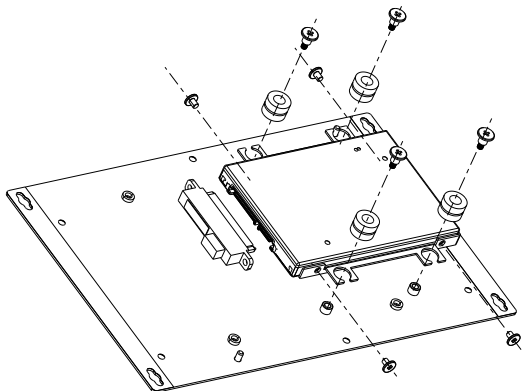


Figure 3-3-1 2.5" drive bay remove and install

3.3.2. Nano SIM card Installation and Removal

Remove the two M3x4 screws and remove the bracket; Push/remove the SIM card into the card slot and lock the cover bracket, as shown in Figure 3-3-2.

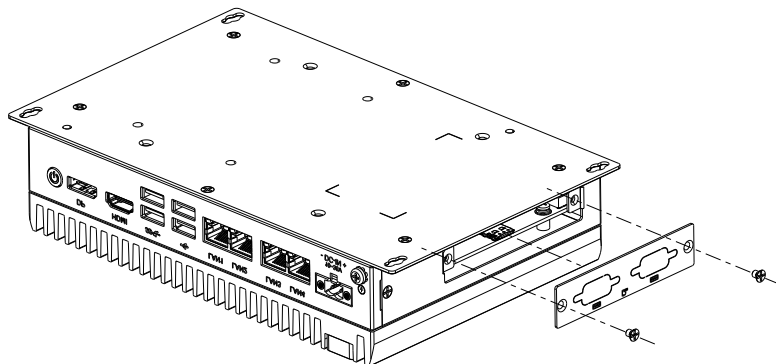


Figure 3-3-2 Nano SIM card remove and install


Chapter 4

BIOS

BIOS

The BIOS Setup utility for the computer is featured by American Megatrends Inc to configure the system settings stored in the system's BIOS ROM. The BIOS is activated once the computer powers on. When the computer is off, the battery on the main board supplies power to BIOS RAM.

To enter the BIOS Setup utility, keep hitting the "Delete" key upon powering on the computer.

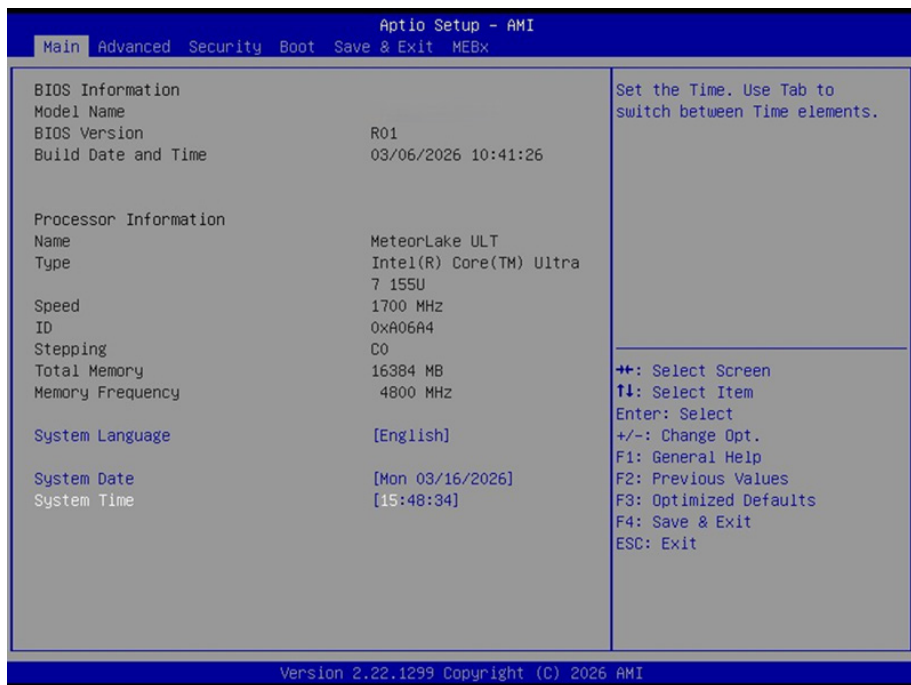

Key Commands

The BIOS Setup utility relies on a keyboard to receive user's instructions. Hit the following keys to navigate within the utility and configure the utility.


Keystroke	Function
← →	Moves left/right between the top menus.
↓ ↑	Moves up/down between highlight items.
Enter	Selects an highlighted item/field.
Esc	▶ On the top menus: Use Esc to quit the utility without saving changes to CMOS. (The screen will prompt a message asking you to select OK or Cancel to exit discarding changes.) ▶ On the submenus: Use Esc to quit current screen and return to the top menu.
Page Up / +	Increases current value to the next higher value or switches between available options.
Page Down / -	Decreases current value to the next lower value or switches between available options.
F1	Opens the Help of the BIOS Setup utility.
F2	Previous values.
F3	Load Optimized Defaults (The screen then prompts a message asking you to select Yes or No to restore to default.)
F4	Exits the utility saving the changes that have been made. (The screen then prompts a message asking you to select Yes or No to exit saving changes.)

Note:

This BIOS Setup utility is updated from time to time to improve system performance and hence the screenshots hereinafter may not fully comply with what you actually have onscreen.

4.1. Main


The **Main** menu features the settings of **System Date** and **System Time** and displays some BIOS and system information.

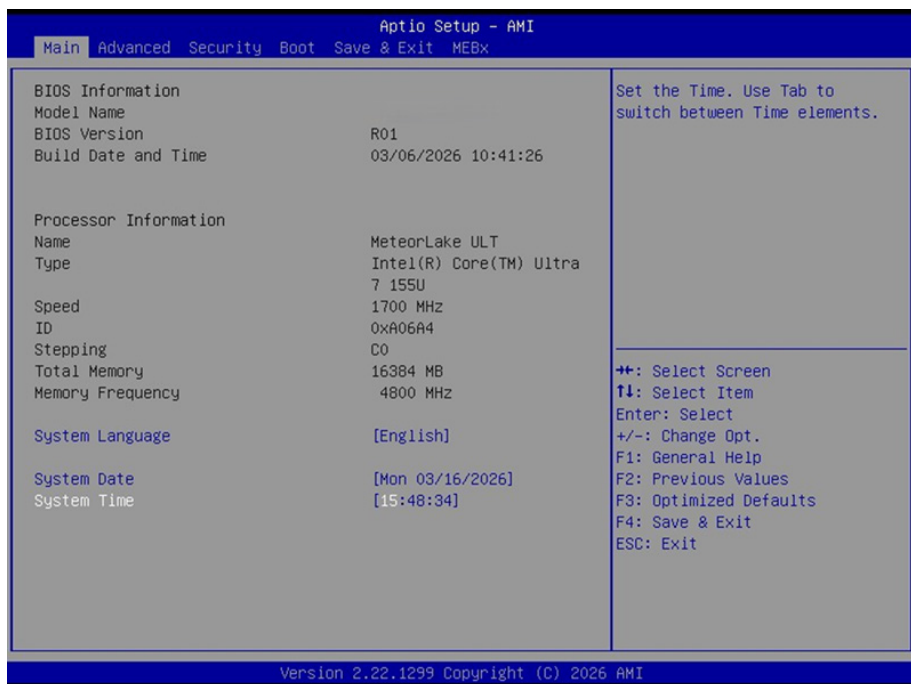

The feature settings are:


Setting	Description
System Language	Select the system language.
System Date	Set the system date. Use Tab to switch between Date elements. Note that the 'Day' automatically changes when you set the date. ► The date format is: Day: Sun to Sat Month: 1 to 12 Date: 1 to 31 Year: 1998 to 9999
System Time	Set the system time. Use Tab to switch between Time elements. ► The time format is: Hour: 00 to 23 Minute: 00 to 59 Second: 00 to 59

4.2. Advanced

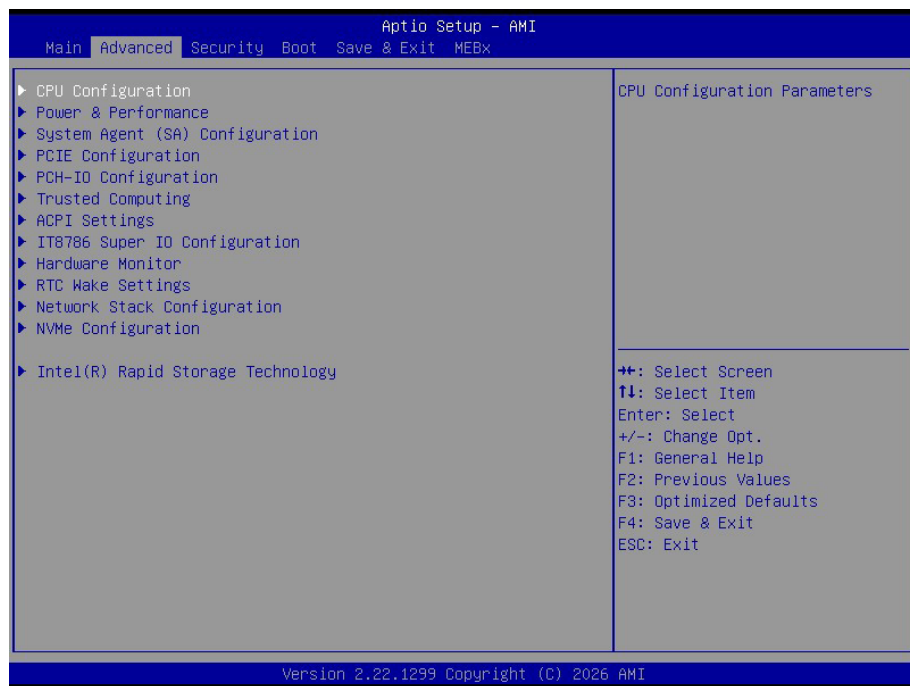


Use the keyboard arrow keys to move to the BIOS Advanced option. The submenu has detailed option descriptions.

4.2.1. Turbo Mode setting

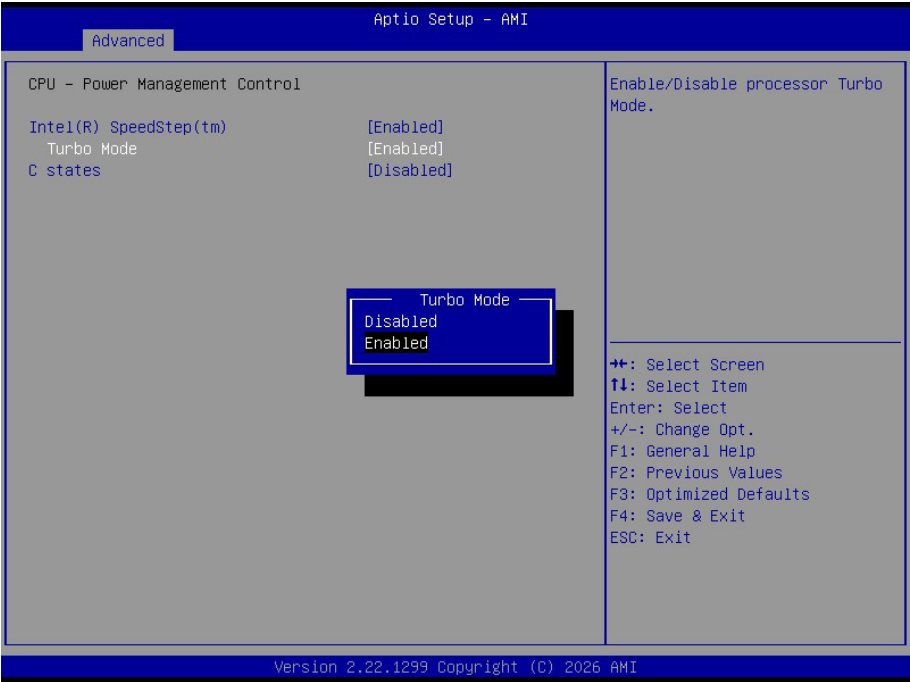


Enter the Advanced interface and select **"CPU Configuration"** -> **"CPU-Power Management Control"**.

4.2.2. COM mode setting

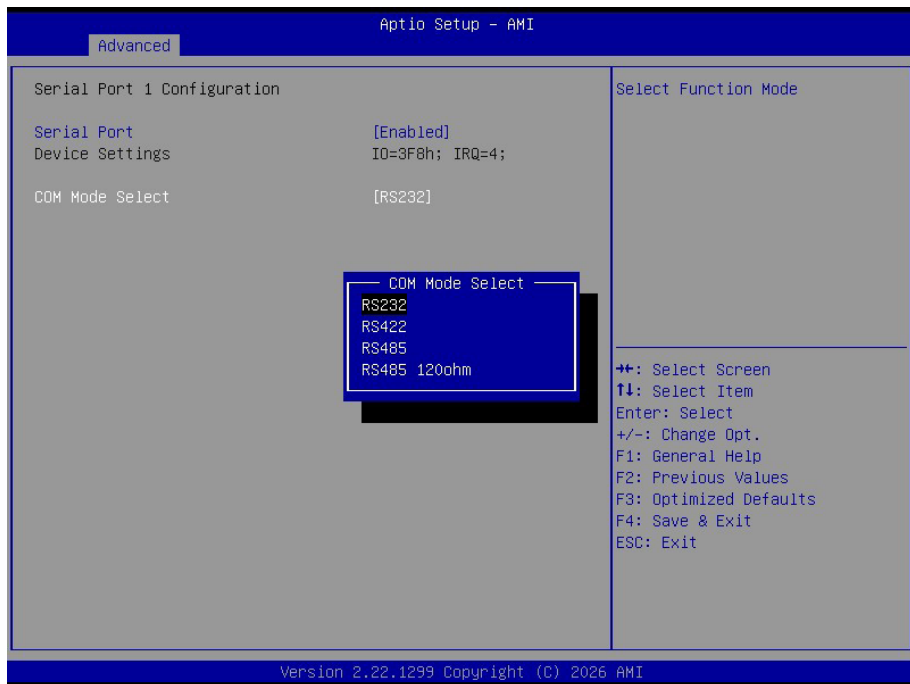


Under the **Advanced** menu, select **"IT8786 Super IO Configuration"** -> **"Serial Port X Configuration"** -> **"COM Mode Select"**. Users can select RS232, RS422 and RS485 for COM mode setting. After setting, press F4 to save and exit, the system will take effect after reboot.

4.2.3. RAID mode Settings

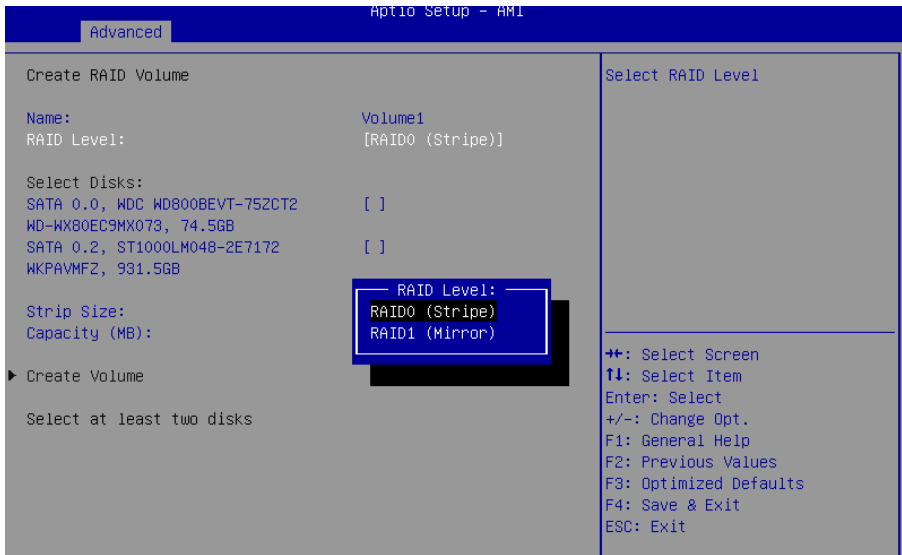


Enter the Advanced interface, then select **System Agent (SA) Configuration->VMD setup menu->Enable VMD controller**. This allows you to enable or disable the RAID function. After setting, press F4 to save and exit. The changes will take effect after the system restarts.

4.2.4. Auto TURN-ON (AT/ATX)

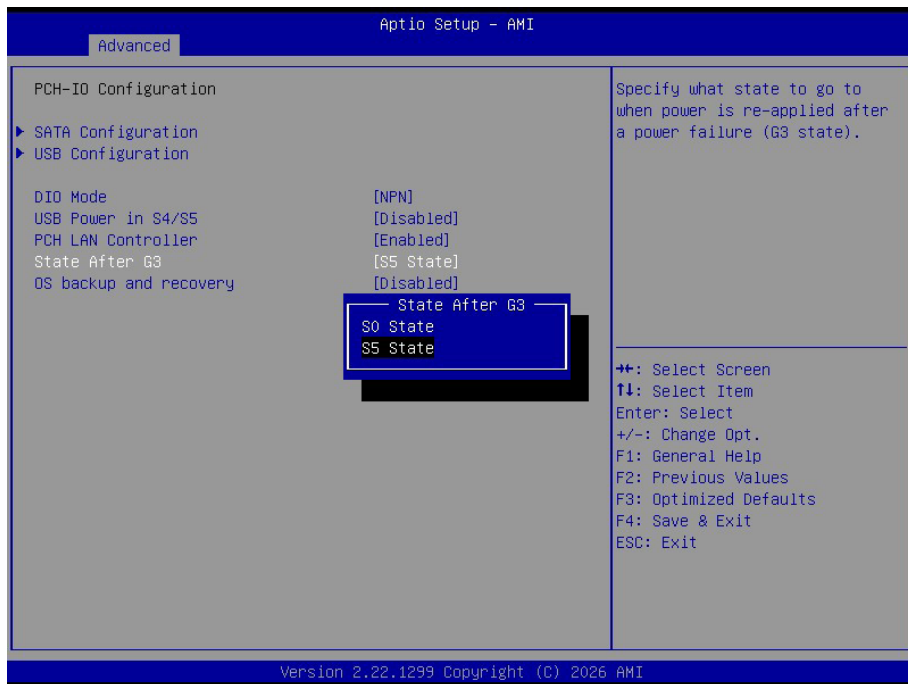

Enter "**Chipset**" menu, and select "**Chipset**"->"**PCH-IO Configuration**"->"**State After G3**" in order. Users can select "**S0 State/S5 State**" for power mode on the system. "**S0 State**" is AT mode, it will power on the system automatically after connecting the power supply, and S5 State is ATX mode. Users need to press the power button to turn on the system after connecting the power supply. **S5 State** is ATX mode. After connecting the power supply, you need to press the power button to power up the device. After setting, press F4 to save and exit, the system will take effect after reboot.


4.2.5. Set USB port is powered during sleep or off

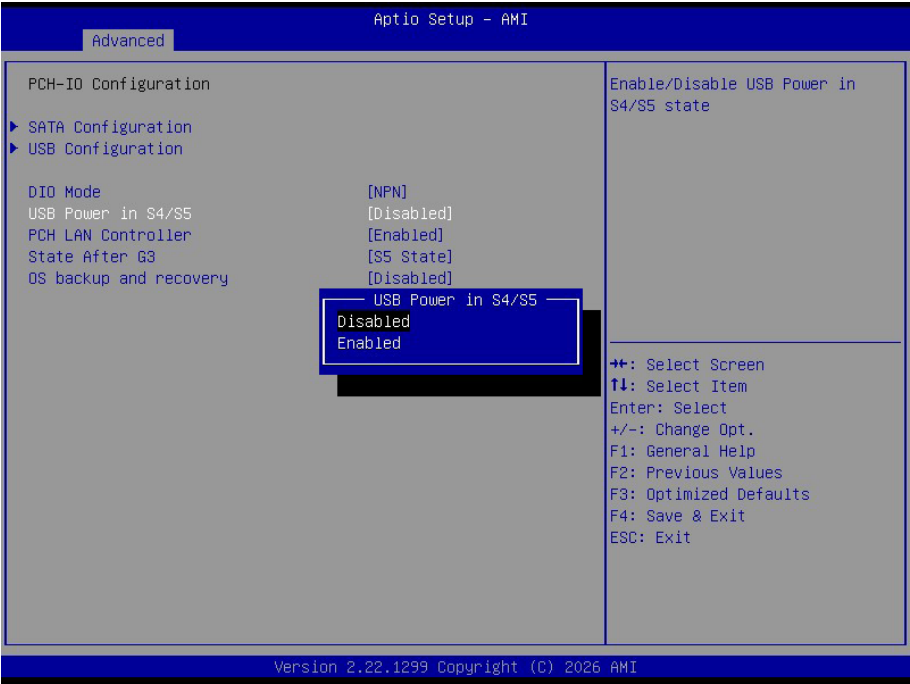

Enable: USB is powered

Disable: USB is not powered

4.3. Security

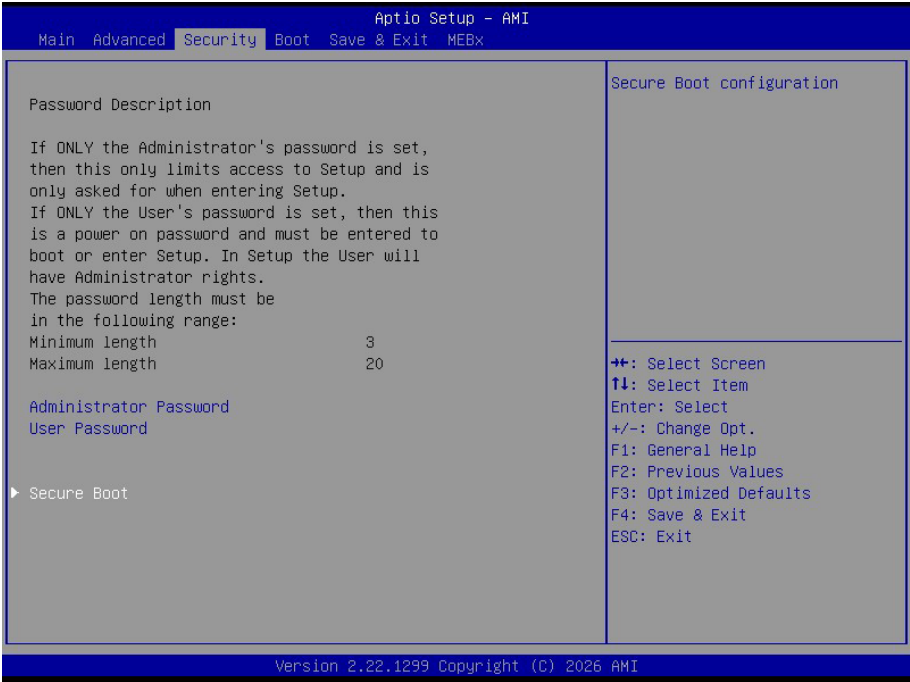


Setting	Description
Administrator Password	To set up an administrator password: 1. Select Administrator Password. 2. An Create New Password dialog then pops up onscreen. 3. Enter your desired password that is no less than 3 characters and no more than 20 characters. 4. Hit [Enter] key to submit.
User Password	To set up an user password: 1. Select User Password. 2. An Create New Password dialog then pops up onscreen. 3. Enter your desired password that is no less than 3 characters and no more than 20 characters. 4. Hit [Enter] key to submit.
Secure Boot	Press [Enter] to configure the advanced items. See 4.3.1. Secure Boot on next page.

4.3.1. Secure Boot



Setting	Description
Secure Boot	Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates. ▶ Options: Enable / Disable (default).
Secure Boot Mode	Allow users to set the secure boot selector. ▶ Options: Standard / Custom (default).
Restore Factory Keys	To restore factory settings. Yes: Agree to restore factory settings. No: Cancel to restore factory settings.
Reset To Setup Mode	Delete all Secure Boot key databases from NVRAM. Yes: Agree to setup mode. No: Cancel to setup mode.
Expert Key Management	Enables expert users to modify Secure boot policy variables without full authentication. Press [Enter] to configure the advanced items. (See next page)

Expert Key Management

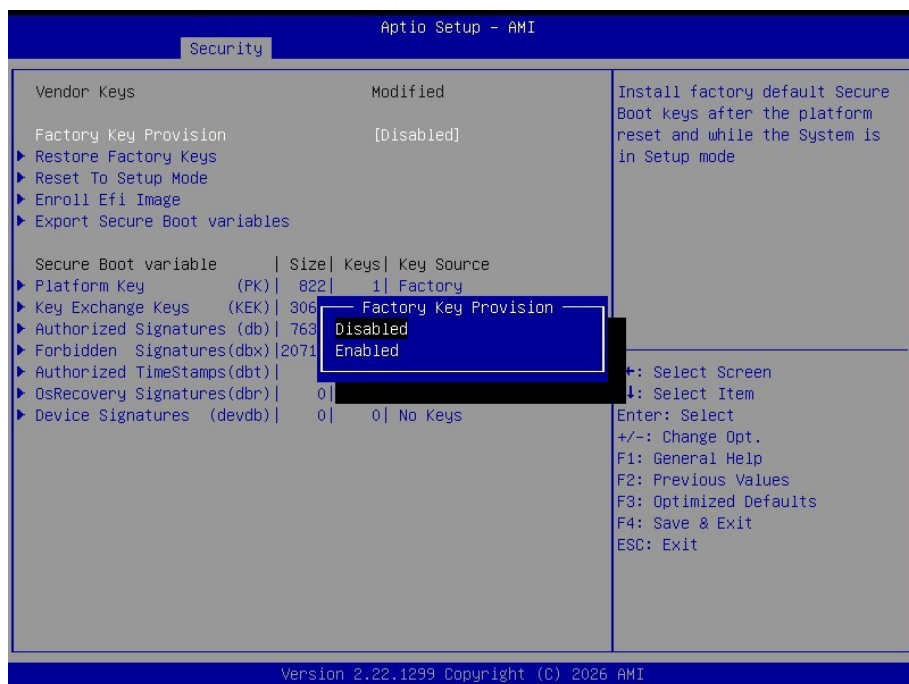

Setting	Description
Factory Key Provision	Install factory defaults Secure Boot keys after the platform reset and while the system is in Setup mode. Enabled: Enables Factory Key Provision (default). Disabled: Disables Factory Key Provision.
Restore Factory Keys	To restore factory settings. Yes: Agree to restore factory settings. No: Cancel to restore factory settings.
Reset To Setup Mode	Yes: Agree to setup mode. No: Cancel to setup mode.
Enroll Efi Image	Allow the image to run in Secure Boot mode.
Export Secure Boot variables	Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device.


Platform Key (PK)	These items allows you to enroll factory defaults or load Certificates from a file.
Key Exchange Keys (KEK)	
Authorized Signatures (db)	
Forbidden Signatures (dbx)	
Authorized TimeStamps (dbt)	
OsRecovery Signatures (abr)	
Device Signatures (devdb)	

4.4. Boot



Setting	Description
Setup Prompt Timeout	Set how long to wait for the prompt to show for entering BIOS Setup. ► The default setting is 1 (sec). ► Set it to 65535 to wait indefinitely.
Bootup NumLock State	Sets whether to enable or disable the keyboard's NumLock state when the system starts up. ► Options available are On (default) and Off.
Quiet Boot	Select "Enable" to display the logo screen at startup. Select "Disable" to turn off the startup logo.
Boot Option Priority	Set the system boot priorities, users can set the order of boot devices. Boot Option #1 is the first priority boot item, Boot Option #2 is the second boot item, and so on. Press F4 to save and exit, the system will take effect after reboot.
Fast Boot	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. ► Options available are Enabled and Disabled (default).

4.5. Save & Exit

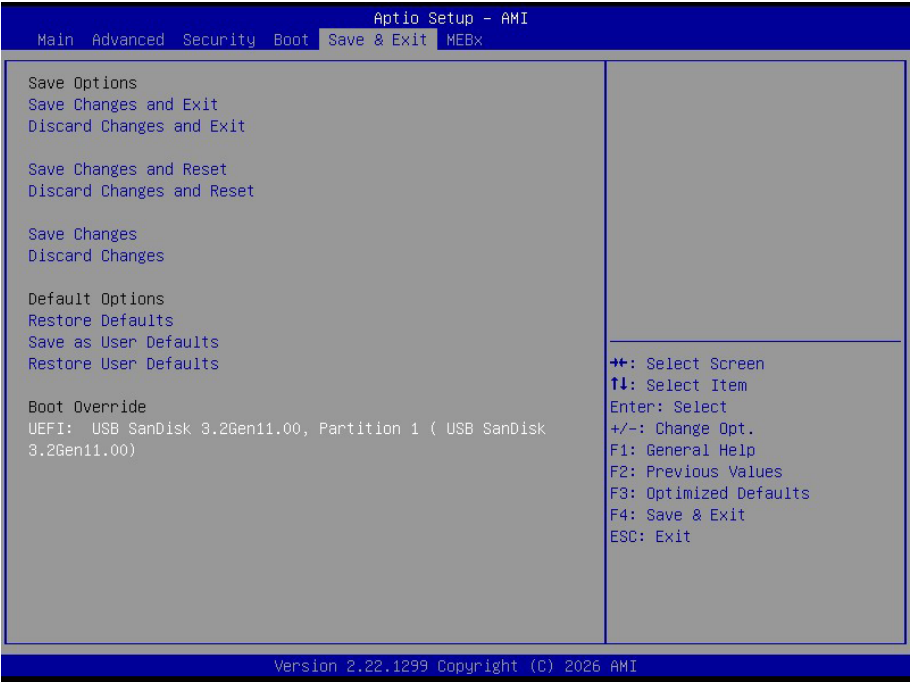

The Save & Exit menu displays the way to exit the BIOS setup utility. When users have completed the setup, users must save and exit for the changes to take effect.

Setting	Description
Save Changes and Exit	Saves the changes and quits the BIOS Setup utility.
Discard Changes and Exit	Discard the changes and restart the system.
Save Changes and Reset	Saves the changes and reset the system.
Discard Changes and Reset	Discard the changes and reset the system.
Save Changes	Saves the changes.
Discard Changes	Discard the changes.
Restore Defaults	Restores all settings to default values.
Save as User Defaults	Saves the change done so far as user defaults.
Restore User Defaults	Restores the user defaults to all the setup options.
Boot Override	Set boot device priority.